



aqu^{li}c[®]



shower filter cartridge

AQ-001C

www.Aqu^{li}c.com

*don't forget these
unique benefits:*

- Multiple layers of unique Nano™ technology ensure that your water is pure
- The KDF®-55 and Nano™ Carbon layers remove harmful chlorine and other chemicals that bleach your skin and hair
- The Nano™ Silver layer protects you from any harmful bacteria
- Your water is softer and PH-neutral



PRODUCT INTRODUCTION

You'll have already felt the difference to your skin and hair with your Aqulic shower filter. Now it's time for you to renew the purity of your water with this replacement filter cartridge. Don't worry, it's easy to install – just follow these instructions.



SGS Laboratory test report


No.: RD/2005/80066; PX/2005/3006702; 493800

INSTALLATION

step 1-3

IMPORTANT: Turn your water supply to your shower off before beginning this procedure.


Detach your Aquilic shower filter from the shower pipes and unscrew the lower case of the shower filter as shown.

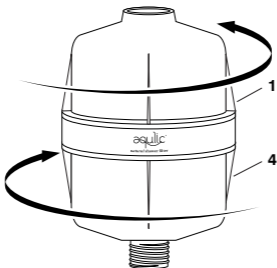

- 1 Upper case
- 2 Rubber ring Ø72
- 3 Aquilic® filter cartridge
- 4 Lower case

step 2-3


Remove the old filter and replace with the new Aqulic AQ-001C filter. Make sure the label on the filter goes toward the lid, as illustrated.

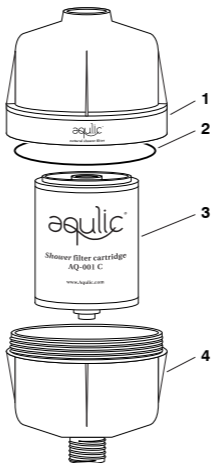

step 3-3

Screw the lower case of the shower filter back on. Make sure the washer is in place to ensure that the unit is watertight.

Now reinstall the filter into your shower assembly and you're done!

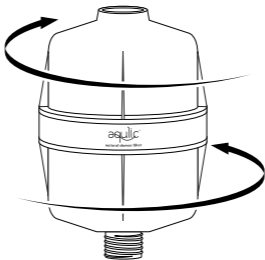

INSIDE THE FILTER CARTRIDGE

A Nano™ Silver Fabric sterilises bacteria

B Nano™ Carbon Fibre (Nano activated carbon fibre fabric) filter contaminants on a molecular level


C Calcium Sulphite catches chlorine, organics and dissolves them.

D KDF®-55 Golden Sand neutralises chlorine and fungi

E Coconut Shell (Coconut Activated Carbon fibre) captures chlorine and odours

F Nano™ Carbon Fibre (Nano activated carbon fibre fabric) further filter contaminants on a molecular level

G Another layer of Nano™ Silver Fabric ensures maximum sterilisation

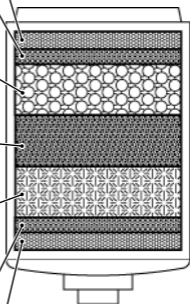



JNB

JNB International Ltd.
International House,
Cray Avenue, Orpington,
Kent BR5 3RS

www.J-N-B.co.uk
Tel: +44 (0) 870 777 3396
Fax: +44 (0) 870 777 3397
E-mail: info@J-N-B.co.uk

Copyright © 2006 JNB International, Limited.
All rights reserved. No part of this manual may be used or reproduced in any manner whatsoever without written authorisation except in the case of brief quotation in critical articles and reviews.

Aqulic, Nano and Nano Technology are trademarks or registered trademarks of JNB International, Limited.
KDF is registered trademark of KDF Fluid Treatment, Inc.